

Choose type of layer

You may choose various heliroutes, stations etc.

The screenshot shows a graphical aviation forecast interface. At the top, a map of the North Atlantic region is displayed. A context menu is open over the map, listing the following options: "World map overlay", "Heli areas", "Heli routes", and "Heli stations". Below the map, the text "Graphical Aviation Forecast" is visible. Underneath, there are two dropdown menus: "Icing index" and "Choose Met Static Service...". A time bar is located below the dropdowns, showing a timeline from +0h to +66h in 6-hour increments. The current time is displayed as "Mon, 02 Nov 2020 09:00:00 GMT/UTC". At the bottom, there is a control panel with playback buttons (rewind, play, fast forward) and a slider for animation refresh, currently set to 6s.

Time bar set in hrs from the start time below

Note the time bar for this layer

Start animation

Animation refresh is default every 6 seconds

Fast forward or rewind by 1 or 6 hrs