

Briefing help

There are four different types of briefings available:

- Aerodrome briefing
- Area briefing
- Route briefing
- Narrow route briefing

All these briefing types are available from the drop-down menu in the top of the screen. The first three types are also available via the map. Please see below for description.

Aerodrome briefing contains information for one or more aerodromes. You can select up to 20 different aerodromes by clicking on the ones you want. Click “Get briefing” when you have selected your aerodrome or “Add aerodrome” as appropriate.

Tailor-made briefings are made by selecting the various options. Note that some countries also issue NOTAM in their native language. To obtain these, tick the button marked “National”.

By selecting “Misc.” you will obtain miscellaneous NOTAM.

“IFR” and “VFR” can be used to filter the NOTAM for either flight rule.

Area briefing By using the tools in the upper right corner you can draw either a rectangle or a polygon. By clicking “Get area briefing” you will get a briefing for the area you have selected.

Route briefing By choosing two or more aerodromes (up to 20) and pressing “Get route briefing” you will get both the aerodrome briefings and the en-route briefing containing the relevant FIR(s). There are a few more options regarding weather and types of NOTAM than in the aerodrome briefing, they can be selected by ticking the appropriate boxes.

Note: IGA, SIGMET and AIRMET are only available for Norway.

Narrow route briefing is available via the flight plan form and by using the “Get NR PIB” button. It will use your filed aerodromes and route as criteria for the briefing. You have the same selection options as on the route briefing.

Runway status is a function whereby the system collects data obtained from automatic measuring equipment on some Norwegian airports. These reports will only be available during the SNOWTAM season, which in turn varies depending on the airport.